Thinking of you

Electrolux

user manual

Dishwasher

ESL 66060

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com

CONTENTS

Safety information	2	Loading cutlery and dishes	10
Product description	5	Setting and starting a washing programme	10
Control panel	5		
Use of the appliance	7	Washing programmes	12
Setting the water softener	7	Care and cleaning	12
Use of dishwasher salt	8	What to do if…	13
Use of detergent and rinse aid	9	Technical data	16
Multitab function	10	Environment concerns	16

Subject to change without notice

⚠ SAFETY INFORMATION

Before the installation and use, read this manual carefully:
- For your safety and the safety of your property.
- To help the environment.
- For the correct operation of the appliance.

Always keep these instructions with the appliance also if you move or give it to a different person.
The manufacturer is not responsible if an incorrect installation and use causes damage.

Children and vulnerable persons safety

- Do not let persons, children included, with reduced physical sensory, reduced mental functions or lack of experience and knowledge to use the appliance. They must have supervision or instruction for the operation of the appliance by a person who is responsible for their safety.
- Children must get supervision to make sure that they do not play with the appliance.
- Keep all packaging away from children. There is the risk of suffocation or injury.
- Keep all detergents in a safe area. Do not let the children touch the detergents.
- Keep children and pets away from the appliance when the door is open.

General safety

- Do not change the specifications of this appliance. There is the risk of injury and damage to the appliance.
- Obey the safety instructions from the detergent manufacturer to prevent burns to eyes, mouth and throat.
- Do not drink the water from the appliance. Particles of detergent can stay in your appliance.
- Do not keep the appliance door open without supervision. This to prevent injury and to fall on an open door.
- Do not sit or stand on the open door.

Use

- The appliance is only for domestic use. Do not use the appliance for other uses to prevent injury to persons and damage to property.
- Only use the appliance to clean accessories that are applicable for dishwashers.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance. Risk of explosion or fire.
- Put the knives and all items with sharp points in the cutlery basket with their points down. If not, put in a horizontal position in the upper basket or in the knife basket. (Not all models have the knife basket).
- Use only specified products for dishwashers (detergent, salt, rinse aid).
- Types of salt that are not specified for dishwashers can cause damage to the water softener.
- Fill the appliance with salt before you start a washing programme. Remaining salt in the appliance can cause corrosion

or make a hole in the bottom of the appliance.
- Do not fill the rinse aid dispenser with other products than the rinse aid, (dishwasher cleaning agent, liquid detergent). This can cause damage to the appliance.
- Make sure that the spray arms can move freely before you start a washing programme.
- The appliance can release hot steam if you open the door while a washing programme operates. There is a risk of skin burns.
- Do not remove the dishes from the appliance until the washing programme is completed.

Care and cleaning
- Before you clean the appliance, deactivate it and disconnect the mains plug from the mains socket.
- Do not use flammable products or products that can cause corrosion.
- Do not use the appliance without the filters. Make sure that the installation of the filters is correct. An incorrect installation causes unsatisfactory washing results and damage to the appliance.
- Do not use spray water or steam to clean the appliance. Risk of electrical shock and damage to the appliance.

Installation
- Make sure that the appliance is not damaged. Do not install or connect a damaged appliance, contact the supplier.
- Remove all packaging before you install and use the appliance.
- Only a qualified person must do the electrical connection, the plumbing and the installation of the appliance. This to prevent the risks of structural damage or injury.
- Make sure that the mains plug is disconnected from the mains socket during installation.
- Do not drill into the sides of the appliance to prevent damage to hydraulic components and electrical components.
- **Important!**Obey the instructions in the template supplied with the appliance:
  – To install the appliance.
  – To assemble the door panel.
  – To connect to the water supply and drain.
- Make sure that the appliance is installed below and adjacent to safe structures.

Frost precautions
- Do not install the appliance where the temperature is less than 0 °C.
- The manufacturer is not responsible for frost damage.

Water connection
- Use new hoses to connect the appliance to the water supply. Do not use used hoses.
- Do not connect the appliance to new pipes or pipes not used for a long time. Let the water flow for some minutes, then connect the inlet hose.
- Make sure not to squash or cause damage to the water hoses when you install the appliance.
- Make sure that the water couplings are tight to prevent a water leakage.
- The first time you use the appliance, make sure that the hoses do not have water leaks.
- The water inlet hose has a safety valve and a double sheath with an inner mains cable. There is pressure in the water inlet hose only when the water flows. If there is a leak in the water inlet hose, the safety valve interrupts the flow of water.
  – Be careful when you connect the water inlet hose:
    – Do not put the water inlet hose or the safety valve in water.
    – If the water inlet hose or the safety valve are damaged, immediately disconnect the mains plug from the mains socket.
    – Contact the service centre to replace the water inlet hose with safety valve.

⚠ **Warning!** Dangerous voltage.

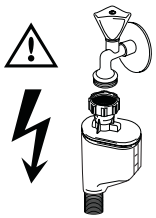

Electrical connection

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply.
- Always use a correctly installed shock-proof socket.
- Do not use multiple plugs and extension cables. There is a risk of fire.
- Do not replace or change the mains cable. Contact the service centre.
- Make sure not to squash or cause damage to the mains plug and cable behind the appliance.
- Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

Service centre

- Only a qualified person can repair or work on the appliance. Contact the service centre.
- Use only original spare parts.

To discard the appliance

- To prevent the risk of injury or damage:
  – Disconnect the mains plug from the mains socket.
  – Cut off the mains cable and discard it.
  – Remove the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation.
  – Discard the appliance at the local waste disposal centre.

⚠ **Warning! The dishwasher detergents are dangerous and can cause corrosion !**

- If an accident occurs with these detergents, contact immediately a physician.
- If the detergent gets into the mouth, contact immediately a physician.
- If the detergent gets into the eyes, contact immediately a physician and clean the eyes with water.
- Keep dishwasher detergents in a safe area and out of children touch.
- Do not keep the appliance door open when there is detergent in the detergent dispenser.
- Fill the detergent dispenser only before you start a washing programme.

PRODUCT DESCRIPTION

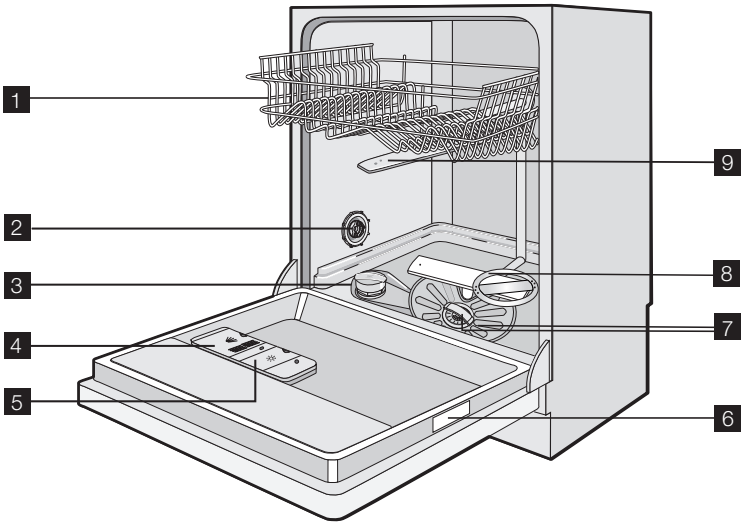

1 Upper basket
2 Water hardness dial
3 Salt container
4 Detergent dispenser
5 Rinse aid dispenser
6 Rating plate
7 Filters
8 Lower spray arm
9 Upper spray arm

Optical signal

After the start of the washing programme, an optical signal shows on the floor below the appliance door:

- A red light for all the washing programme duration.
- A green light when the washing programme ends.
- A red light that flashes when there is a malfunction.

If the appliance is installed in height, with a flush kitchen furniture door, the optical signal does not show.

CONTROL PANEL

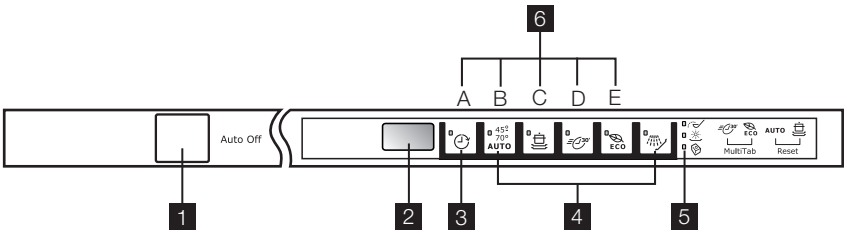

1 On/off button
2 Display
3 Delay start button
4 Programme selection buttons
5 Indicator lights
6 Function buttons

Indicator lights	
Salt [1]	It comes on when it is necessary to fill the salt container. Refer to 'Use of dishwasher salt'. After you fill the container, the salt indicator light can stay on for some hours. This does not have an unwanted effect on the operation of the appliance.
Rinse aid [1]	It comes on when it is necessary to fill the rinse aid container. Refer to 'Use of detergent and rinse aid'.
Multitab	It comes on when you activate the multitab function. Refer to 'Multitab function'.

1) When the salt and/or rinse aid containers are empty, the related indicator lights do not come on while a washing programme operates.

Display

The display shows:
- The electronic adjustment of the level of the water softener
- The activation and deactivation of the rinse aid dispenser (only with the multitab function on)
- The time of the washing programme
- The remaining time to the end of the washing programme
- The end of a washing programme (the display shows a zero)
- The time of the delay start
- The alarm codes
- The activation and deactivation of the acoustic signals.

Delay start button

Use this button to delay the start of the washing programme with an interval between 1 and 24 hours. Refer to 'Select and start a washing programme'.

Programme buttons

Press one of these buttons to set a washing programme. The related indicator comes on. Refer to 'Washing programmes'.

Function buttons

Use the function buttons for these operations:
- To adjust electronically the level of the water softener. Refer to 'Setting the water softener'.
- To activate/deactivate the multitab function. Refer to the chapter 'Multitab function'.
- To activate/deactivate the rinse aid dispenser when the multitab function is on. Refer to 'What to do if...'.
- To cancel the washing programme in progress or a delay start in progress. Refer to 'Setting and starting a washing programme'.
- To deactivate/activate the audible signals. Refer to 'Audible signals'.

Setting mode

The appliance must be in setting mode for these operations:
- To set and start a washing programme.
- To set and start a delay start.
- To adjust electronically the level of the water softener.
- To activate or deactivate the multitab function.
- To activate or deactivate the rinse aid dispenser (only with the multitab function on).
- To deactivate or activate the acoustic signals.

Activate the appliance. The appliance is in setting mode when:
- All the programme indicators come on.

Activate the appliance. The appliance is not in setting mode when:

- Only one programme indicator comes on.
- The display shows the time of the washing programme or of the delay start.
  – It is necessary to cancel the programme or the delay start to go back to the setting mode. Refer to 'Select and start a washing programme'.

Audible signals

The audible signals indicate:

- The end of the washing programme.
- The electronic adjustment of the level of the water softener
- The appliance has a malfunction.

Do these steps to deactivate the audible signals:

1. Switch on the appliance.
2. Make sure that the appliance is in setting mode.
3. Press and hold function buttons B and C until the indicator lights of function buttons A, B and C start to flash.
4. Release function buttons B and C.
5. Press the function button C.
   – The indicator lights for function buttons A and B go off.
   – The indicator light for function button C flashes.
   – The display shows the current set.

16	Audible signals activated
06	Audible signals deactivated

6. Press the function button C again.
   – The display shows the new adjustment.
7. Switch off the appliance to keep the operation.

Do the above procedure to activate again the audible signals.

USE OF THE APPLIANCE

1. Be sure that the set level of the water softener agrees with the water hardness in your area. If not, adjust the water softener.
2. Fill the salt container with dishwasher salt.
3. Fill the rinse aid dispenser with rinse aid.
4. Load cutlery and dishes into the appliance.
5. Set the correct washing programme for the type of load and soil.
6. Fill the detergent dispenser with the correct quantity of detergent.
7. Start the washing programme.

If you use the combi detergent tablets ('3 in 1', '4 in 1', '5 in 1'), use the multitab function (refer to 'Multitab function').

SETTING THE WATER SOFTENER

The water softener removes minerals and salts from the water supply. These minerals and salts can cause damage to the appliance.

Adjust the level of the water softener if this does not agree with the water hardness in your area.
Contact your local water authority to know the water hardness in your area.

Water hardness				Water hardness adjustment	
German degrees (°dH)	French degrees (TH°)	mmol/l	Clarke degrees	manually	electronically
51 - 70	91 - 125	9,1 - 12,5	64 - 88	2 [1)]	10

Water hardness				Water hardness adjustment	
German degrees (°dH)	French degrees (TH°)	mmol/l	Clarke degrees	manually	electronically
43 - 50	76 - 90	7,6 - 9,0	53 - 63	2 [1)]	9
37 - 42	65 - 75	6,5 - 7,5	46 - 52	2[1)]	8
29 - 36	51 - 64	5,1 - 6,4	36 - 45	2[1)]	7
23 - 28	40 - 50	4,0 - 5,0	28 - 35	2[1)]	6
19 - 22	33 - 39	3,3 - 3,9	23 - 27	2[1)]	5[1)]
15 - 18	26 - 32	2,6 - 3,2	18 - 22	1	4
11 - 14	19 - 25	1,9 - 2,5	13 - 17	1	3
4 - 10	7 - 18	0,7 - 1,8	5 - 12	1	2
< 4	< 7	< 0,7	< 5	1[2)]	1[2)]

1) Factory position.
2) Do not use salt at this level.

You must adjust the water softener manually and electronically.

Manual adjustment

Turn the water hardness dial to the position 1 or 2 (refer to the table).

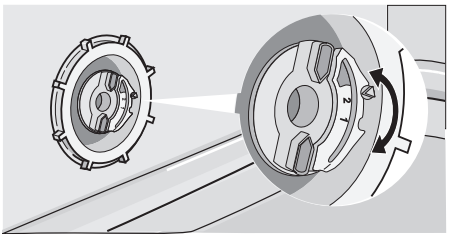

Electronic adjustment

1. Switch on the appliance.
2. Make sure that the appliance is in setting mode.
3. Press and hold function buttons B and C until the indicator lights of function buttons A, B and C start to flash.
4. Release function buttons B and C.
5. Press function button A.
   – The indicator lights for function buttons B and C go off.
   – The indicator light for function button A continues to flash.
   – The display shows the current adjustment.
   – The intermittent audible signals tell the current adjustment.

   Example: the display shows **5 L** / 5 intermittent audible signals = level 5.
6. Press the function button A again and again until the display shows the necessary adjustment.
7. Press the on/off button to keep the operation.

If the water softener is set electronically to the level 1, the salt indicator light stays off.

USE OF DISHWASHER SALT

How to fill the salt container:

1. Turn the cap counterclockwise and open the salt container.
2. Fill the salt container with 1 litre of water (only for the first time you fill with salt).
3. Use the funnel to fill the salt container with salt.
4. Remove the salt around the opening of the salt container.
5. Turn the cap clockwise to close the salt container.

It is correct that water comes out from the salt container when you fill it with salt.

USE OF DETERGENT AND RINSE AID

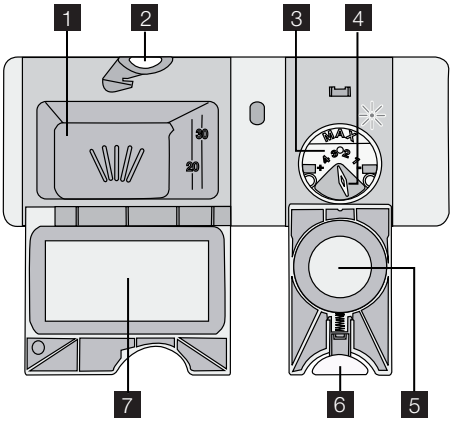

Use of detergent

To help the environment, do not use more than the correct quantity of detergent.
Obey the instructions on the detergent packaging.

How to fill the detergent dispenser:

1. Press the release button 2 to open the lid 7 of the detergent dispenser.
2. Put the detergent in the dispenser 1 .
3. If the washing programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door.
4. If you use the detergent tablets, put the tablet in the detergent dispenser 1 .
5. Close the detergent dispenser. Press the lid until it locks into position.

Use long washing programmes when you use the detergent tablets. These cannot fully dissolve with short washing programmes and can decrease the washing results.

Use of rinse aid

Rinse aid makes it possible to dry the dishes without streaks and stains.
The rinse aid dispenser automatically adds rinse aid during the last rinsing phase.

Do these steps to fill the rinse aid dispenser:

1. Press the release button 6 to open the lid 5 of the rinse aid dispenser.
2. Fill the rinse aid dispenser 3 with rinse aid. The mark 'max' shows the maximum level.
3. Remove the spilled rinse aid with an absorbent cloth to prevent too much foam during the washing programme.
4. Close the rinse aid dispenser. Press the lid until it locks into position.

Adjust the rinse aid dosage

Factory set: position 3.

You can set the rinse aid dosage between position 1 (lowest dosage) and position 4 (highest dosage).

Turn the rinse aid selector 4 to increase or decrease the dosage.

MULTITAB FUNCTION

The multitab function is for combi detergent tablets.
These tablets contain agents as detergent, rinse aid and dishwasher salt. Some types of tablets can contain other agents.
Do a check if these tablets are applicable for the local water hardness. Refer to the instructions from the manufacturer.
When you set the multitab function, it stays on until you deactivate it.
The multitab function deactivates the flow of rinse aid and salt.
The multitab function deactivates the indicator lights of salt and rinse aid.
The programme duration can increase if you use the multitab function.

Activate the multitab function before the start of a washing programme. You cannot activate the multitab function when the programme operates.

To activate the multitab function:
1. Switch on the appliance.
2. Make sure that the appliance is in setting mode.
3. Press and hold function buttons D and E until the multitab indicator light comes on.

To deactivate the multitab function and use separately detergent, salt and rinse aid:
1. Switch on the appliance.
2. Make sure that the appliance is in setting mode.
3. Press and hold function buttons D and E until the multitab indicator light goes off.
4. Fill the salt container and rinse aid dispenser.
5. Adjust the water hardness setting to the highest level.
6. Do a washing programme without dishes.
7. Adjust the water softener to the water hardness in your area.
8. Adjust the rinse aid dosage.

LOADING CUTLERY AND DISHES

Refer to the leaflet 'Examples of Real-Life loads'.

Hints and tips

- Do not put in the appliance items that can absorb water (sponges, household cloths).
- Remove the remaining food from the items.
- Make soft the remaining burned food on the items.
- Put hollow items (cups, glasses and pans) with the opening down.
- Make sure that water does not collect in containers or in bowls.
- Make sure that cutlery and dishes do not bond together.
- Make sure that the glasses do not touch other glasses.
- Put small items in the cutlery basket.
- Mix the spoons with other cutlery to prevent them to bond together.
- When you put the items in the baskets, make sure that the water can touch all surfaces.
- Put light items in the upper basket. Make sure that the items do not move.
- Water droplets can collect on plastic items and non-stick pans.

SETTING AND STARTING A WASHING PROGRAMME

Starting the washing programme without delay start

1. Activate the appliance.
2. Make sure that the appliance is in setting mode.
3. Set the washing programme.
   - The related programme indicator comes on.
   - The programme time flashes in the display.

4. Close the appliance door, the washing programme starts automatically.

Starting the washing programme with delay start

1. Activate the appliance.
2. Make sure that the appliance is in setting mode.
3. Set the washing programme.
4. Press the delay button again and again until the display shows the time of the delay start.
   - The time of the delay flashes in the display.
   - The delay indicator is on.
5. Close the appliance door, the countdown starts automatically.
   - When the countdown is completed, the washing programme starts automatically.

If you open the door while the countdown operates, the display shows the time of the countdown.
The opening of the appliance door stops the countdown. When you close the door, the countdown continues from the point of interruption.

Cancelling the delay start

If the appliance door is open, and the countdown has not started

1. Press the delay button again and again until the display shows the time of the washing programme.
   - The time flashes in the display.
2. Close the appliance door, the washing programme starts automatically.

If the appliance door is closed, and the countdown operates

1. Open the appliance door.
2. Press the delay button again and again until the display shows the time of the washing programme.
3. Close the appliance door, the washing programme starts automatically.

Interruption of a washing programme

- Open the appliance door.
  – The washing programme stops.
- Close the appliance door.
  – The washing programme continues from the point of interruption.

Cancelling the washing programme

If the washing programme has not started, you can change the selection.
To change the selection while the washing programme operates, it is necessary to cancel the programme.

1. Press and hold at the same time, function buttons (B) and (C) until all the programme button indicators come on.
2. Release function buttons (B) and (C). The set programme is cancelled.

Make sure that there is detergent in the detergent dispenser before you start a new washing programme.

End of the washing programme

When the washing programme is completed, an intermittent acoustic signal operates.

1. Open the appliance door. The display shows a zero.
2. Deactivate the appliance.

For better drying results, keep the appliance door ajar for some minutes.

Auto Off

The Auto Off function automatically switches off the appliance 10 minutes after the end of the washing programme.
This helps to decrease energy consumption.

Remove the items from the baskets

- Let the dishes become cold before you remove them from the appliance. Hot dishes can be easily damaged.
- First remove the items from the lower basket, then from the upper basket.
- There can be water on the sides and on the door of the appliance. Stainless steel becomes cool more quickly than the dishes.

WASHING PROGRAMMES

Programme	Degree of soil	Type of load	Programme description
45°-70° **AUTO** Automatic [1]	Any	Crockery, cutlery, pots and pans	Prewash Main wash 45 °C or 70 °C 1 or 2 middle rinses Last rinse Dry
Intensive	Heavy soil	Crockery, cutlery, pots and pans	Prewash Main wash 70 °C 1 middle rinse Last rinse Dry
Quick [2]	Normal or light soil	Crockery and cutlery	Main wash 60 °C Rinse
ECO Economy [3]	Normal soil	Crockery and cutlery	Prewash Main wash 50 °C 1 middle rinse Last rinse Dry
Prewash	This programme gives dishes a quick rinse to prevent the remaining food to bond on the dishes and bad odours to come out from the appliance. Do not use detergent with this programme.		1 cold rinse

1) The appliance adjusts automatically the temperature and the quantity of the water. This depends if the appliance has a full load or not and on the degree of soil. The programme duration and the programme consumptions can change.
2) When you have a light load, this programme gives a timesaving solution with perfect washing results.
3) Test programme for test institutes. Refer to supplied leaflet for test data.

Consumption values

Programme[1)]	Energy (kWh)	Water (litre)
45°-70° **AUTO** Automatic	0,9 - 1,7	8 - 17
Intensive	1,4 - 1,6	15 - 16
Quick	0,9	9
ECO Economy	1,0 - 1,1	10 - 11
Prewash	0,1	4

1) The display shows the programme duration.

The pressure and temperature of the water, the variations of power supply and the quantity of dishes can change these values.

CARE AND CLEANING

To remove and clean the filters

Dirty filters decrease the washing results. Although the maintenance is very low with these filters, make a check at intervals and if necessary, clean them.

1. Turn the filter (A) counterclockwise and remove it out from filter (B).

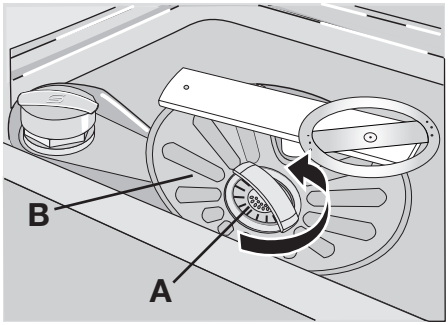

2. Filter (A) has two parts. To disassemble the filter, pull them apart.

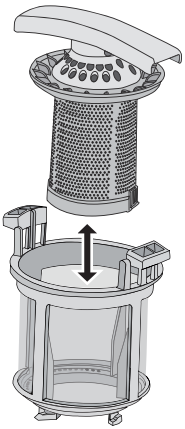

3. Fully clean the parts with water.
4. Put the two parts of the filter (A) together and push. Make sure that they assemble correctly in each other.
5. Remove the filter (B).
6. Fully clean the filter (B) with water.
7. Put the filter (B) to its initial position. Make sure that it assembles correctly in the two guides (C).

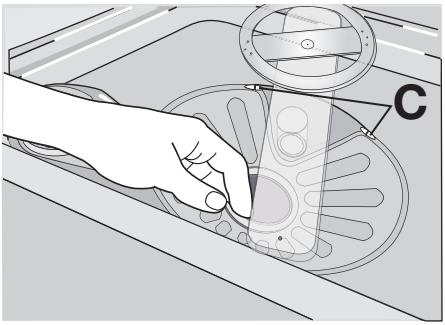

8. Put the filter (A) into position in filter (B). Turn the filter (A) clockwise until it locks.

To clean the spray arms

Do not remove the spray arms.
If the holes in the spray arms become clogged, remove remaining parts of soil with a thin pointed object.

To clean the external surfaces

Clean the external surfaces of the appliance and control panel with a moist soft cloth.
Only use neutral detergents.
Do not use abrasive products, abrasive cleaning pads or solvents (acetone).

WHAT TO DO IF…

The appliance does not start or stops during operation.

First try to find a solution to the problem (refer to the chart). If not, contact the service centre.

Malfunction	Fault code	Possible cause	Possible solution
The appliance does not fill with water.	The display shows ,10	The water tap is blocked or is furred with limescale.	Clean the water tap.
		The water pressure is too low.	Contact your local water authority.
		The water tap is closed.	Open the water tap.

Malfunction	Fault code	Possible cause	Possible solution
		The filter in the water inlet hose is blocked.	Clean the filter.
		The connection of the water inlet hose is not correct.	Make sure that the connection is correct.
		The water inlet hose is damaged.	Make sure that the water inlet hose has no damages.
The appliance does not drain the water.	The display shows ,20	There is a blockage in the sink spigot.	Clean the sink spigot.
		The connection of the water drain hose is not correct.	Make sure that the connection is correct.
		The water drain hose is damaged.	Make sure that the water drain hose has no damages.
The anti-flood device operates.	The display shows ,30		Close the water tap and contact the service centre.
The programme does not start.		The appliance door is open.	Close the door correctly.
		The mains plug is not connected in.	Put in the mains plug.
		Blow out fuse in the household fuse box.	Replace the fuse.
		The delay start is set.	If you want to cancel the delay start, refer to 'Setting and starting a washing programme'.

After the check, switch on the appliance. The programme continues from the point of interruption.
If the malfunction shows again, contact the service centre.
If the display shows other fault codes, contact the service centre.
The necessary data for the service centre is on the rating plate.

We recommend that you write the data here:

Model (MOD.) .....
Product number (PNC) .....
Serial number (S.N.) .....

The washing results and drying results are not satisfactory

Problem	Possible cause	Possible solution
The dishes are not clean.	The selected washing programme was not applicable for the type of load and soil.	Make sure that the washing programme is applicable for the type of load and soil.
	The baskets were not loaded correctly, water did not touch all surfaces.	Load the baskets correctly.

Problem	Possible cause	Possible solution
	The spray arms could not turn freely because of incorrect arrangement of the load.	Make sure that an incorrect arrangement of the load does not cause a blockage of the spray arms.
	The filters are dirty or not assembled and installed correctly.	Make sure that the filters are clean and correctly assembled and installed.
	The quantity of detergent was not sufficient or missing.	Make sure that the quantity of detergent is sufficient.
Limescale particles on the dishes.	The salt container is empty.	Fill the salt container with dishwasher salt.
	Incorrect water softener adjustment	Adjust the water softener.
	The salt container cap is not closed correctly.	Make sure that the salt container cap is closed correctly.
There are streaks, milky stains, or a bluish layer on glasses and dishes.	Rinse aid dosage is too high.	Decrease the rinse aid dosage.
Dry water drop stains on glasses and dishes.	Rinse aid dosage is too low.	Increase the rinse aid dosage.
	The detergent can be the cause.	Use a different brand of detergent.
The dishes are wet.	You have set a washing programme without drying phase or with a decreased drying phase.	Let the door stay ajar for some minutes before you remove the dishes.
The dishes are wet and dull.	The rinse aid dispenser is empty.	Fill the rinse aid dispenser with rinse aid.
	The multitab function is on (this function automatically deactivates the rinse aid dispenser).	Activate the rinse aid dispense.

How to activate the rinse aid dispenser

1. Switch on the appliance.
2. Make sure that the appliance is in setting mode.
3. Press and hold function buttons B and C.
   – The indicator lights for function buttons A, B, and C start to flash.
4. Release function buttons B and C.
5. Press function button B.
   – The indicator lights for function buttons A and C go off.
   – The indicator light for function button B continues to flash.
   – The display shows the current set.

0d	Rinse aid dispenser deactivated
1d	Rinse aid dispenser activated

6. Press function button B again.
   – The display shows the new adjustment.
7. Switch off the appliance to keep the operation.

TECHNICAL DATA

Dimensions	Width	596 mm
	Height	818 - 898 mm
	Depth	550 mm
Water supply pressure	Minimum	0.5 bar (0.05 MPa)
	Maximum	8 bar (0.8 MPa)
Water supply [1)]	Cold water or hot water	maximum 60 °C
Capacity	Place settings	12

1) Connect the water inlet hose to a water tap with a 3/4'' thread.

The rating plate on the inner edge of the appliance door shows the electrical connection data.

If the hot water comes from alternative sources of energy, (e.g. solar panels, photovoltaic panels and aeolian), use a hot water supply to decrease energy consumption.

ENVIRONMENT CONCERNS

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it.

www.electrolux.com/shop

117935990-B-192011